

FILE NOS.

[RESET], [CONTINUOUS]

Select the image numbering method to be used when you insert a new memory card.

Images are automatically assigned consecutive image numbers from 0101 to 9900, and stored in folders containing up to 100 images. Folders are numbered from 101 to 998.

[RESET]: Image numbers will restart from 101-0101 every time you insert a new memory card.

[CONTINUOUS]: Image numbers will continue from the number following that of the last image recorded with the camcorder.

- If the memory card you insert already contains an image with a larger number, a new image will be assigned a number one higher than that of the last image on the memory card.

- We recommend using the [CONTINUOUS] setting.

CARD OPERATIONS

.....

PRINT ORD.ALL ERASE

(84)



[NO], [YES]

TRANS.ORD.ALL ERASE

(80)



[NO], [YES]

ERASE ALL IMAGES

(65)



[NO], [YES]

INITIALIZE

(66)



[CANCEL], [INITIALIZE], [COMPL.INIT.]

PLAY/OUT SETUP*

.....

* In mode, the following menu options are divided into two menus, [PLAY/OUT SETUP1] and [PLAY/OUT SETUP2]; this will be indicated with the respective menu icon.

PLAYBACK STD

[AUTO], [HDV], [DV]

Select the video standard to be used for playback.

[AUTO]: Switches automatically between standards (HDV/DV) during playback.

[HDV], [DV]: Plays back only the recordings made in the selected standard.

TV TYPE

[NORMAL TV], [WIDE TV]

In order to display the picture in full and in the correct aspect ratio, select the setting according to the type of television to which you will connect the camcorder.

[NORMAL TV]: TV sets with 4:3 aspect ratio.

[WIDE TV]: TV sets with 16:9 aspect ratio.