

 
 


Screen Format

 
 


 
Selects a screen format from a range of screen types according to your preferences.

“Screen Format” allows you to select a screen format to better fit content you are viewing. This function is useful to display 4:3 broadcasts by filling the entire screen or to display subtitles properly.

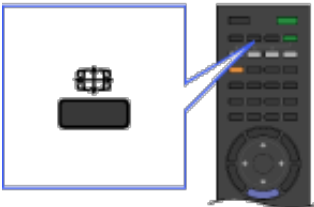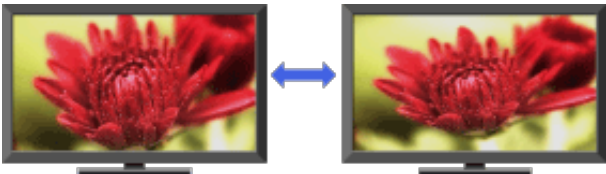

Screen Types

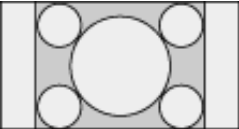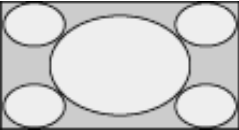	Smart*	Enlarges the picture to fill a 16:9 screen, preserving the original picture as much as possible.
	4:3	Displays a 4:3 picture in its original size. Side bars are shown to fill the 16:9 screen.
	Wide	Stretches the 4:3 picture horizontally, to fill the 16:9 screen.
	Zoom*	Displays the cinemascopic (letter box format) picture in the correct proportion.
	14:9*	Displays a 14:9 picture in its original size. Side bars are shown to fill the 16:9 screen.

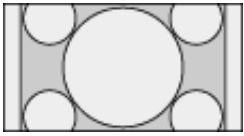

* Parts of the top and bottom of the picture may be cut off. You can adjust the vertical position of the picture. Press / to move the picture up or down.

Copyright 2010 Sony Corporation