


USER GUIDE

1. Tool

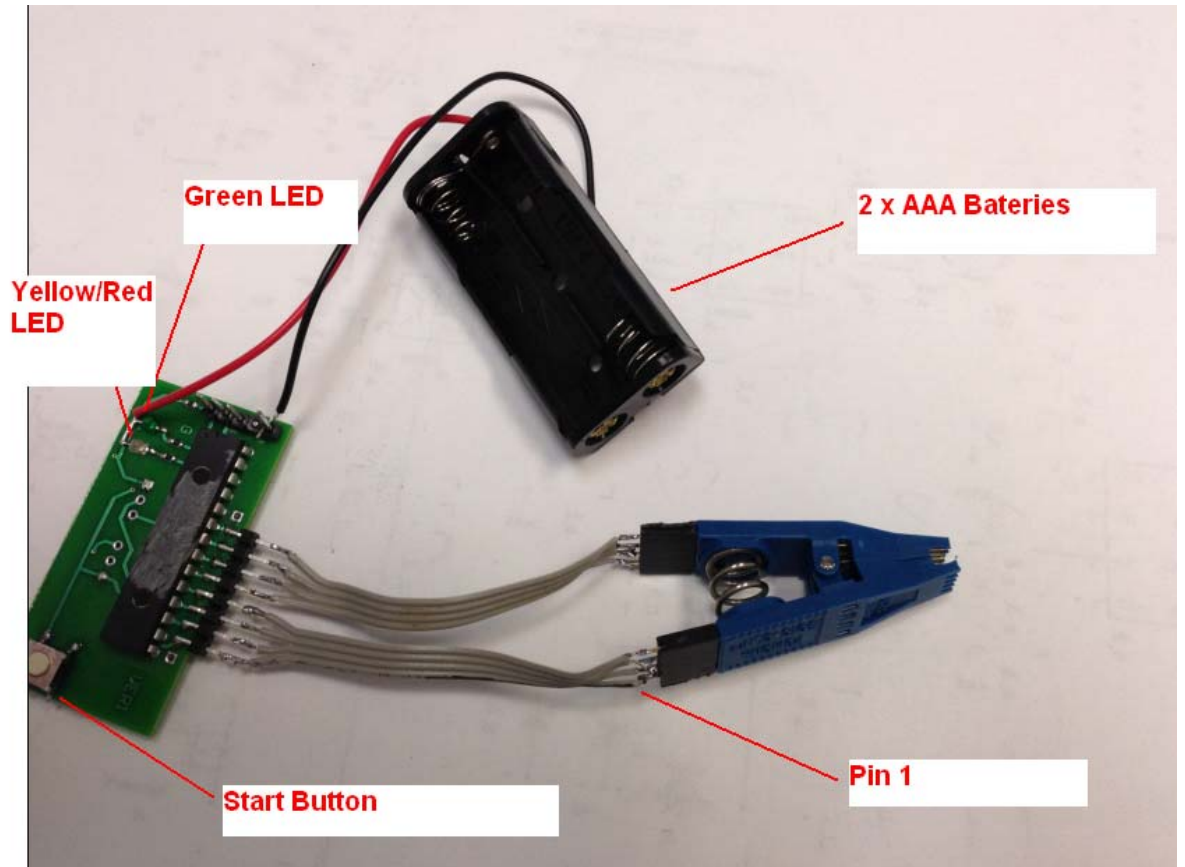


2. Self Test Steps

1. Remove the clip from any logic board
2. Install the batteries
3. Both LED blinking together indicate the license remaining, if blinking 5 time mean 5 license left


4. If both LED blink simultaneously mean no license left

3. Unlock steps

1. Remove tool batteries
2. Open up target laptop and disconnect battery and charger, located EFI ROM, the part number should look something like MX25L6406 or MX25L3205, It is 8 pin chip.
3. Located the pin one on the chip

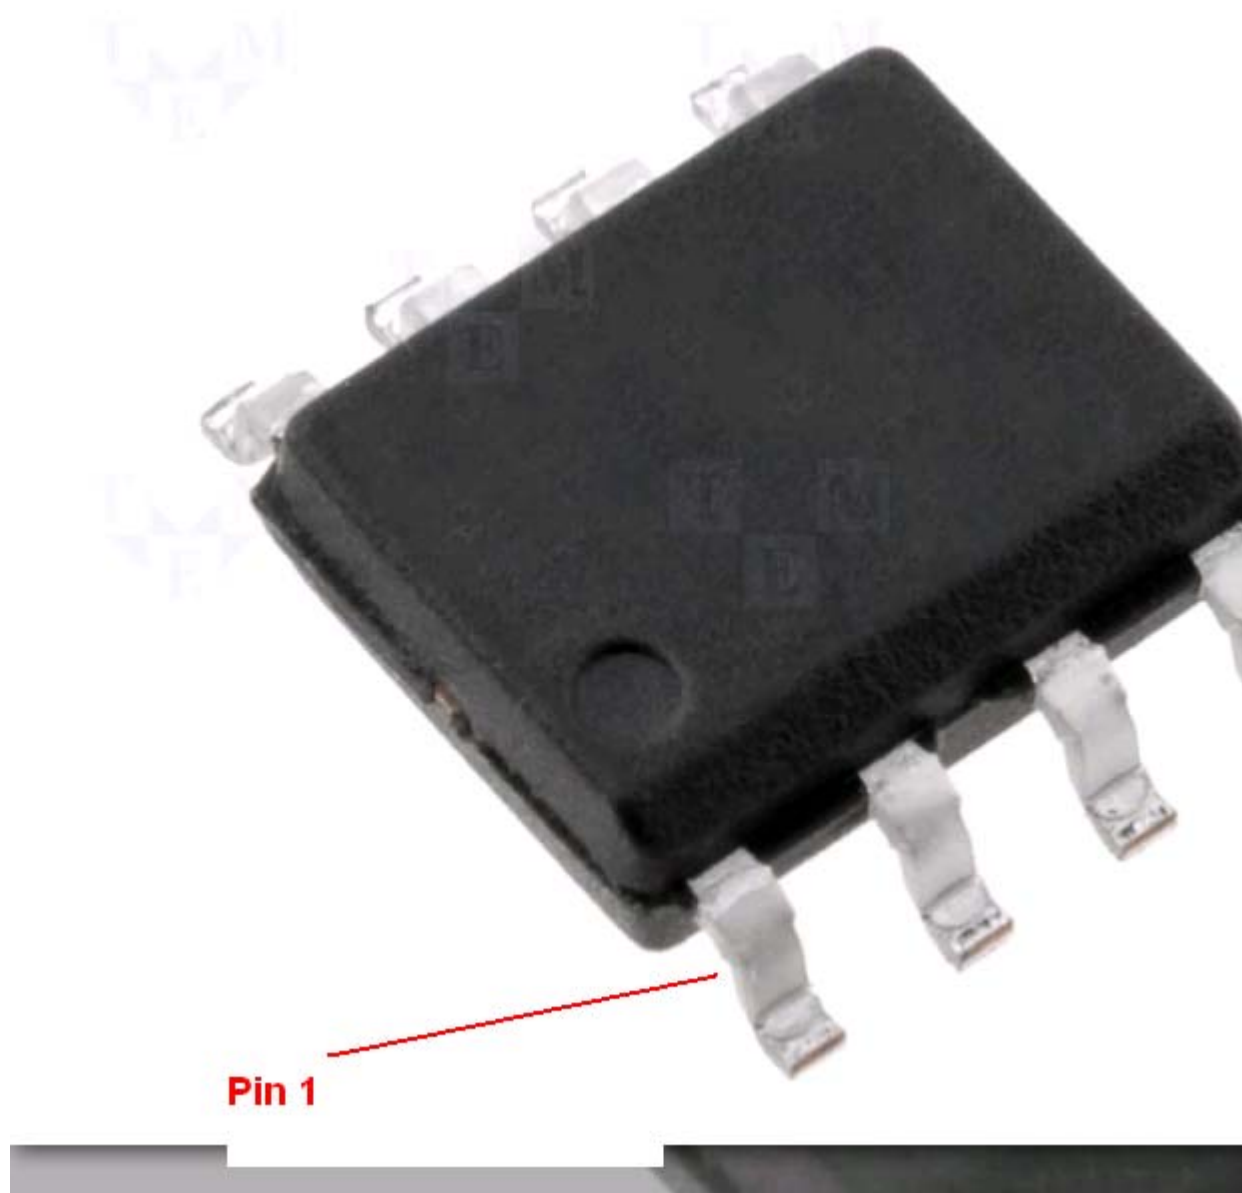

4. Install Clip on the chip, the black/Red mark wire connected to pin 1, and make sure is make full contact

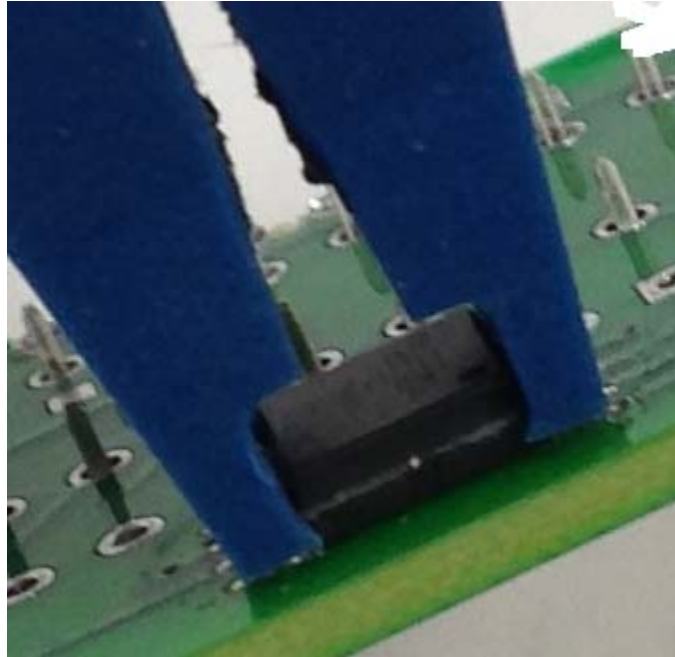


5. Double check, make sure pin 1 connect to Red/Black wire on the clip
6. Install batteries, and should see both LED blinking indicate Licenses
7. The Red LED should remain ON and green LED is blinking, if detect the correct model on the laptop.
8. If only Red LED is ON, and Green LED is OFF, it means can not detect the laptop model, please double check the connection on the clip and model number on laptop
9. WAIT until Red LED turn off, and GREEN LED stay ON,
10. Remove the batteries first, then remove the clip


11. Done.
12. Some laptop screen might be blank when first power on after unlock, please turn on/off laptop few more time, wait at least 10 seconds on each ON and OFF

EFI ROM location


2011/2012 A1278

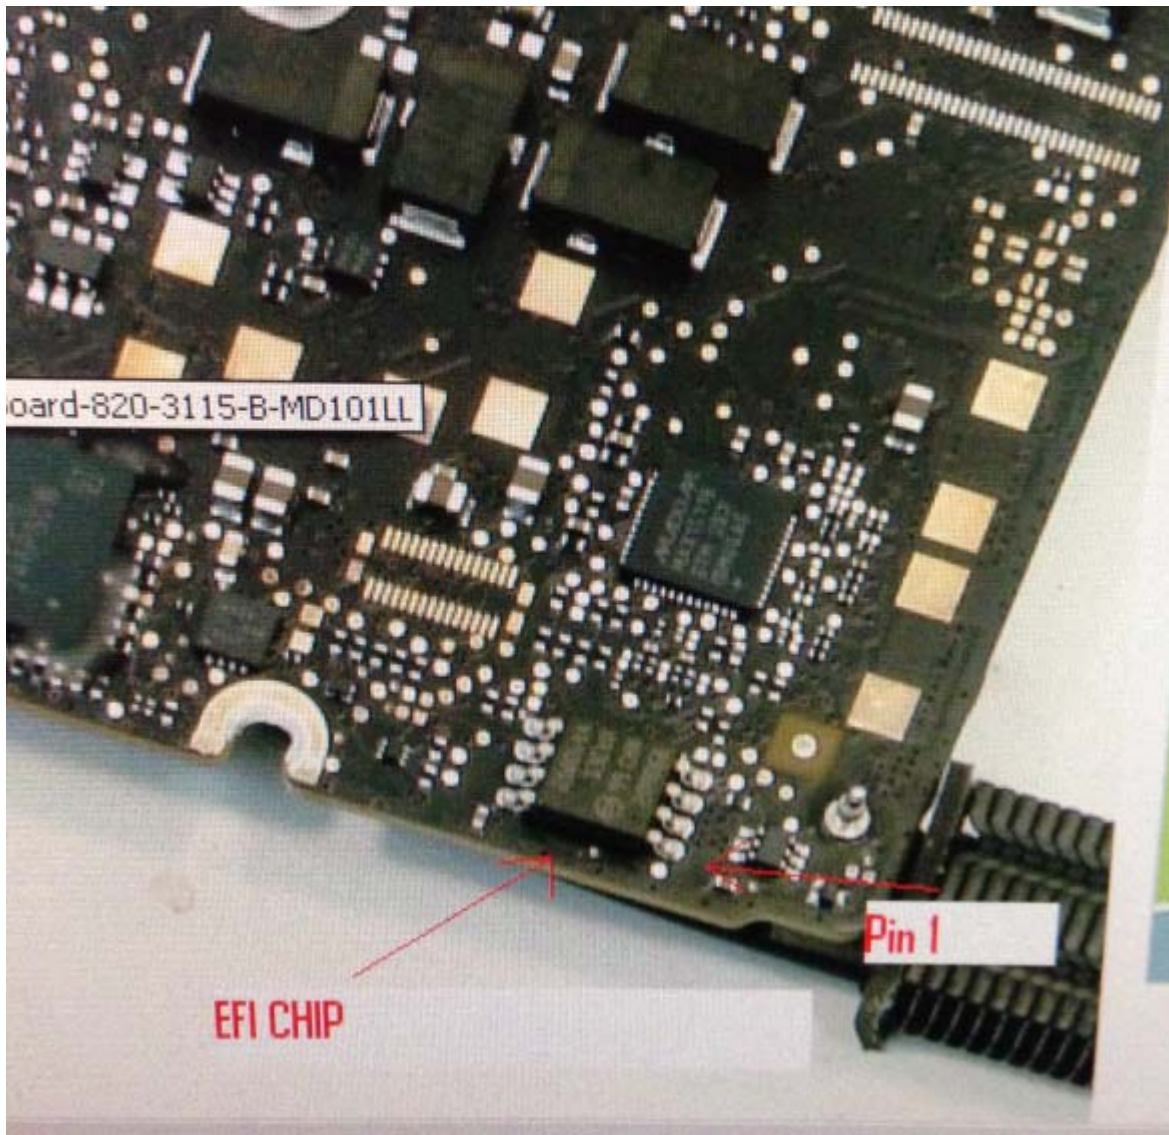


2011/2012 A1286 (Need take out the logic board)

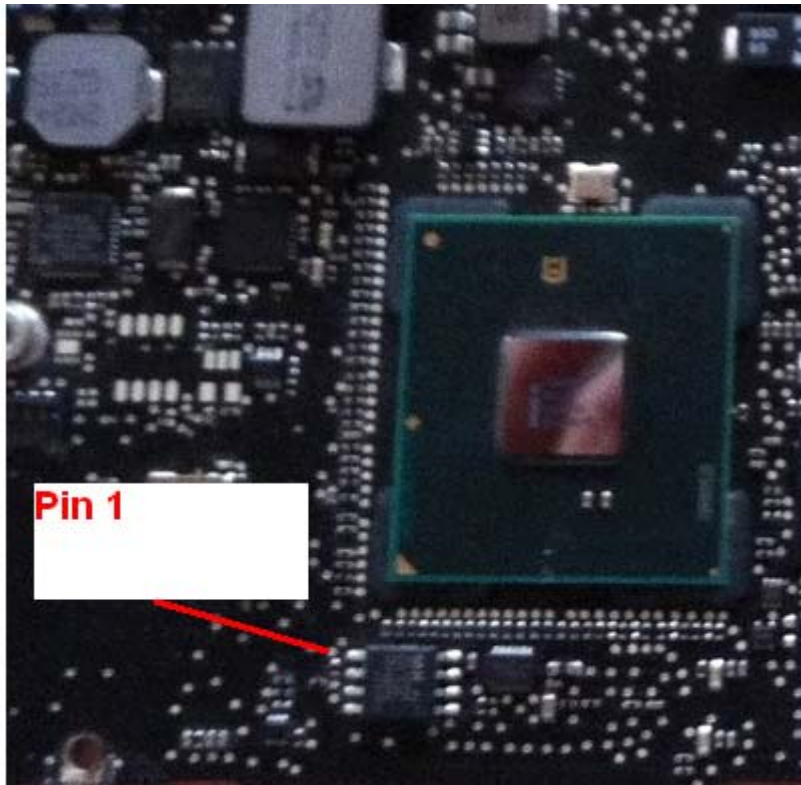


2010 A1278

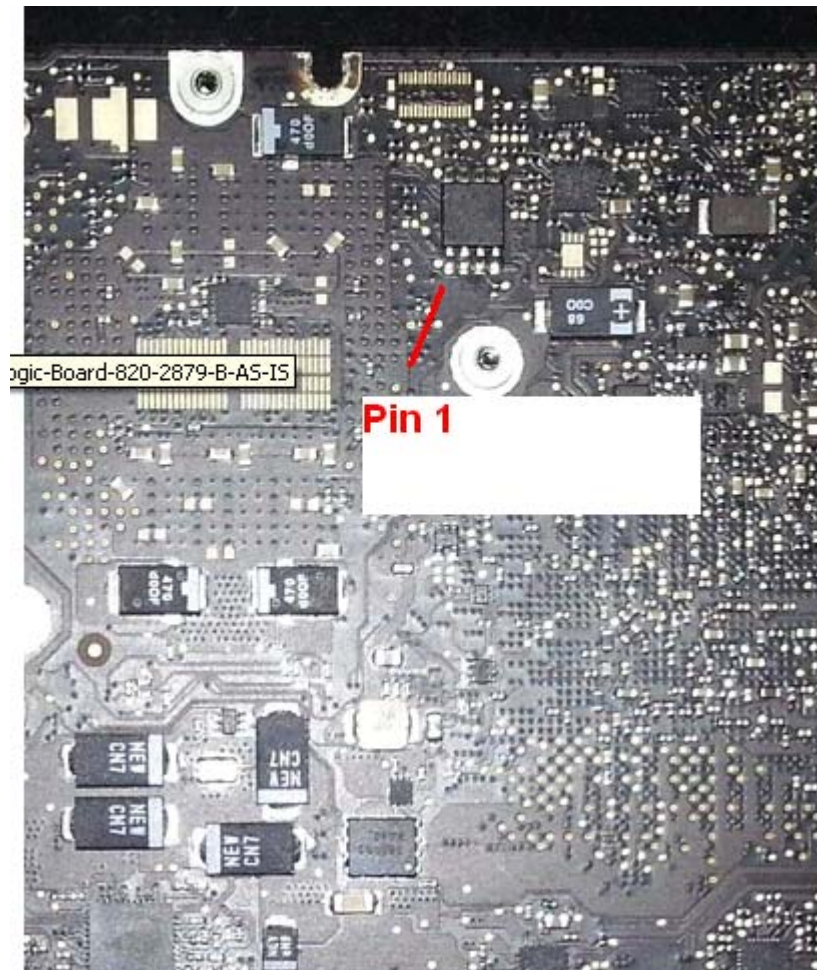

2010 A1369

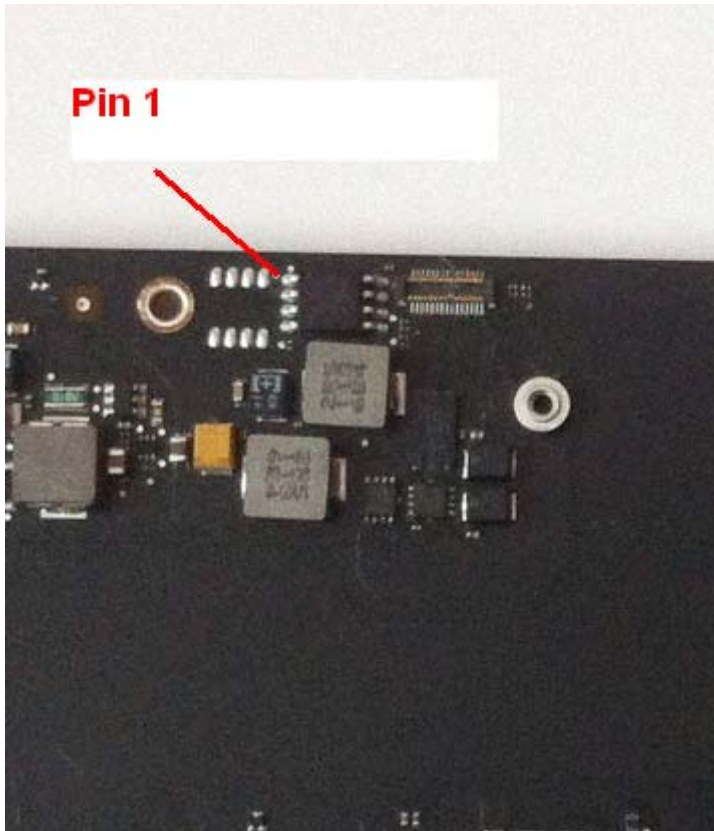

2011 A1311 iMac 21"

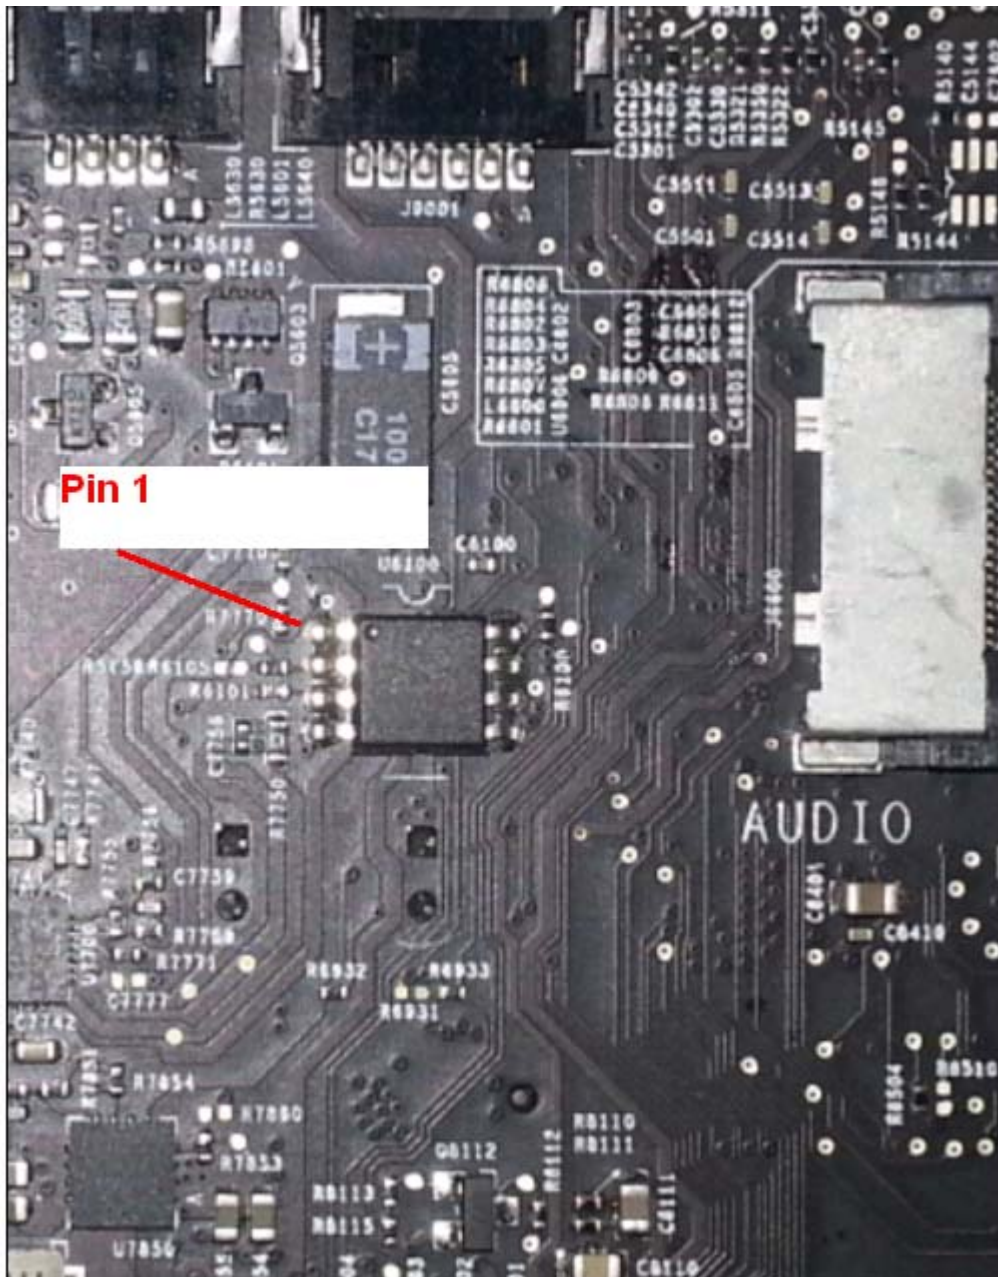

2012 A1398

